



[^] It is suggested to tighten the grub screws snug to create a divot in the sleeve and then loosen them slightly so the plunger pin can move freely. Leaving the grub screws too tight will result in poor performance or possible damage to the Flying ToeKick.

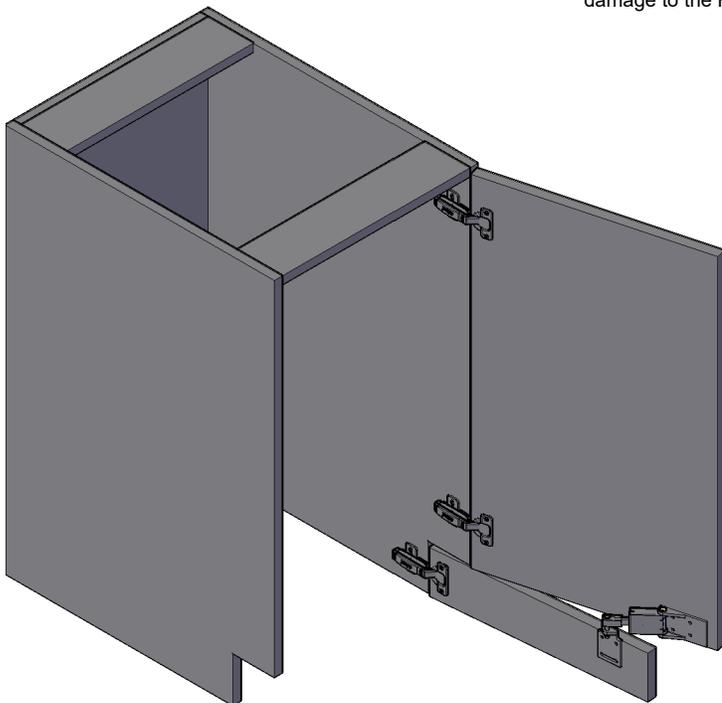

These are suggested starting hole dimensions. It is important to layout to your cabinet to verify placement of the attachment plate. This layout is for standard euro full overlay applications.

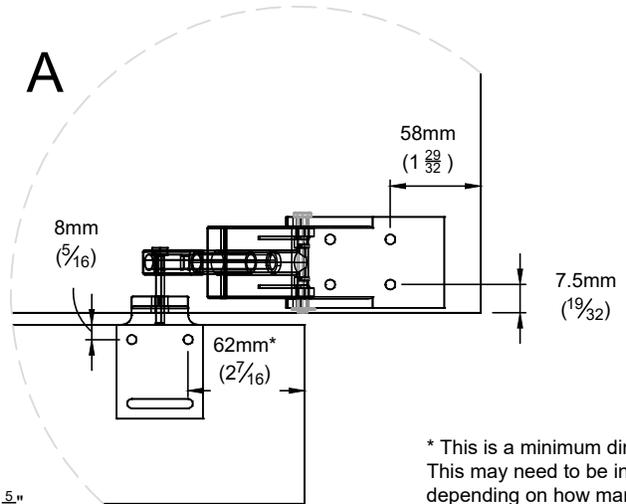

* This is a minimum dimension. This may need to be increased depending on how many degrees the euro hinge opens, and desired opening of the toe kick.

